
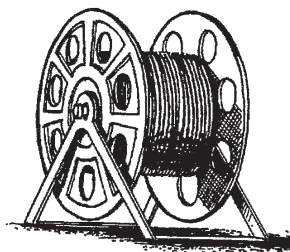

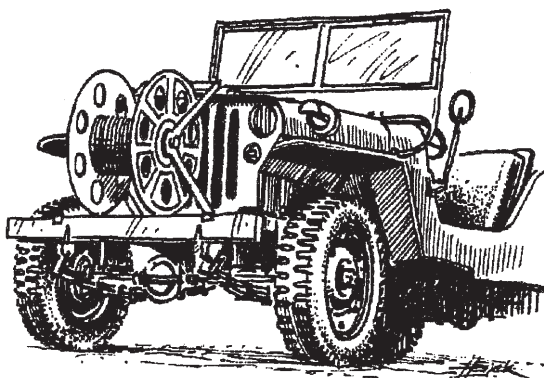


1/35

Operator reels

085

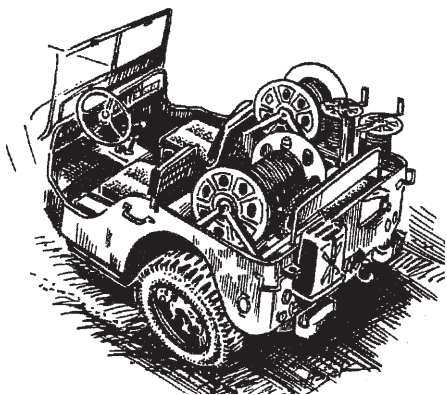

8 1595241600857


www.plusmodel.cz

www.plusmodel.cz

www.plusmodel.cz

Cívky jsou určeny jako doplněk modelů 1/35. Nejprve si rozdělte odlišky středů cívek podle čísel, které mají na svých čelech. Potom tyto čela zarovnejte a zabruste. Pozor na stejnou rovinu obou čel! Takto připravené středy můžete začít slepovat s kovovými díly. Vždy se řiďte obrázkem z návodu. Ke středu č. 1 přilepte boční kovové díly č. 7, ke středu č. 2 patřít boční díly č. 1. Do středů cívky po slepení vyvrtajte malé dírký a vsadte do nich kousky drátu nebo tyčinky z umělé hmoty jako osy. Potom vystříhnete díl č. 4 - stojan cívky a ohněte a přilepte jej na cívku podle obrázku. Naprosto stejně postupujte u středu č. 4 pouze boky mají č. 3 a stojan č. 2. Ke středu č. 3 patřít boky č. 5. Opět po slepení vyvrtajte do středu dírký pro osičky, z nichž však jedna strana má kliku, proto tuto kliku přilepte až po nalepení držáku č. 6. Tento držák ohněte opět podle obrázku v návodu. Tyto středy jsou v setu dva a proto celou operaci ještě zopakujte. K poslednímu středu bez označení patřít boky č. 8. Opět do středů vyvrtajte dírký a tentokrát vlepte poněkud delší osičky, které sloužili zároveň jako držátka. Tato cívka je německého původu, zatímco ostatní cívky jsou původem spojenecké. Mnoho fotografií však ukazuje používání kořistního materiálu a to se týká i těchto cívek, takže určení instalace je pouze na vás. Také zabarvení nebylo složitě-spojenecké cívky olivová, německá cívka šedá, středy většinou černé.

Návod ke stavbě Instructions

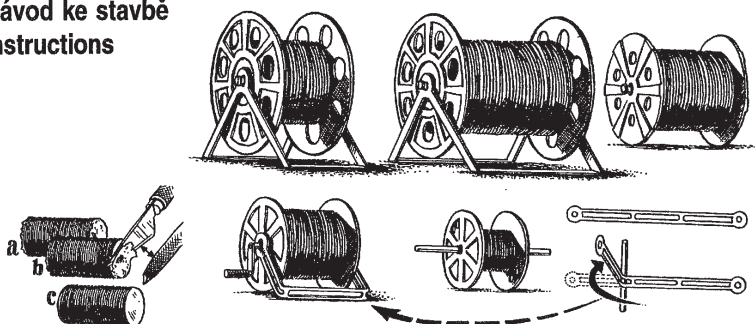

Reels are intended as a supplement of the dioramas in the 1/35 scale. First separate centre castings according numbers on their fronts. Then smooth and grind these fronts. Be careful on the faces the fronts. You can prepared centres cement together with metal parts. Always follow the instruction drawing. Centre No. 1 goes with side metal part No. 7, the centre No. 2 goes with side parts No. 1. It is suitable to drill little wholes in the centres of the reels set together and put in a bit of the wire or plastic sprue as the axis. Cut off part No. 4 - Real stand, bend it and cement on the reel in accordance with the instruction drawing. In the same way proceed with the centre No. 4, but it goes with the fronts No. 3 and Stand No. 2. The centres No. 3 go with fronts No. 5. Again, drill wholes for the axis, but there is a handle on one side, therefore cement holder No. 6 and this handle. Bend the holder according the instruction drawing. There are two centres of this type, so will you repeat the operation. The last centre without any marking goes with the fronts No. 8. Again, drill the whole the axis, but these are somewhat longer - they served as the holders. This last reel is of the German origin, the others are of the equipment of Allied Armies. However, many photos show utilizing of the captured material and this is in the case of this reels too. So, determination of the installation depend only on your own choice. Allied reels were painted olive green, German reels grey, centres mostly black.

Plus Model s.r.o.
Jižní 56, 370 10 České Budějovice
Czech Republic
<http://www.plusmodel.cz>
e-mail: plusmodel@plusmodel.cz

MODELCHOICE.NET
ORDER & BUY DIRECTLY FROM MANUFACTURERS